



Radio Remote Control Replacement Transmitter Programming Instructions

1. Make sure transmitter is ON. (Press GREEN button)
2. Reset power to RECEIVER by momentarily removing and re-inserting fuse OR receiver plug.



OR







3. Press and hold the 2 YELLOW buttons shown at the same time WITHIN 10-seconds of turning on the receiver.

2 FUNCTION MODELS

4 FUNCTION MODELS

6 FUNCTION MODELS

8/10 FUNCTION MODELS

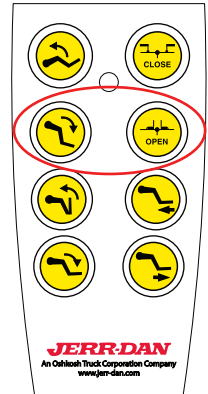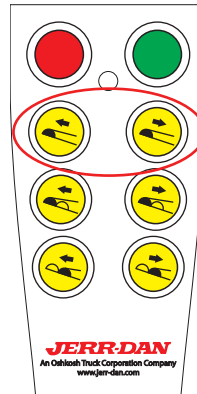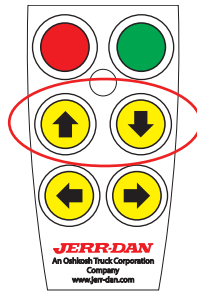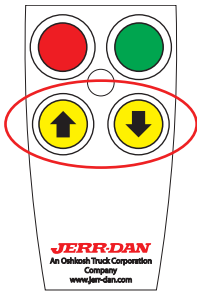

Receiver should now respond to the new transmitter.

TROUBLESHOOTING

Transmitter LED not on

Possible problem/solution:

1. Transmitter off. Press green button to turn on transmitter.
2. Dead batteries. Replace with new, alkaline type.

Transmitter LED on, but functions not working at all

Possible problem/solution:

1. Receiver not powered on. Check electrical plug and fuse.
2. Receiver not programmed. Repeat this procedure.
3. Out of range. Stand within 100 feet for best results.
4. Obstructions. Maintain line-of-sight to vehicle.

Functions operate intermittently

Possible problem/solution:

1. Out of range. Stand within 100 feet for best results.
2. Obstructions. Maintain line-of-sight to vehicle.
3. Interference. Make sure no other transmitters are operating in the immediate area.

Need more help?

CALL MIRATRON 1-866-417-5008